



Air Furniture Operation Instructions

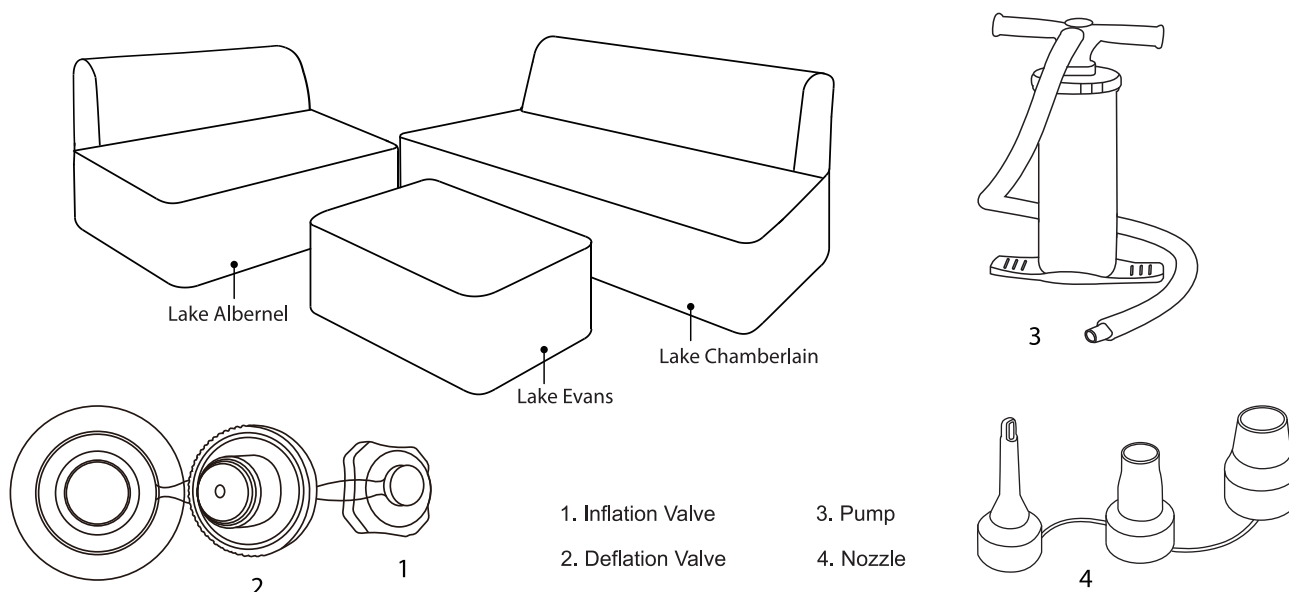

Inflation Operation

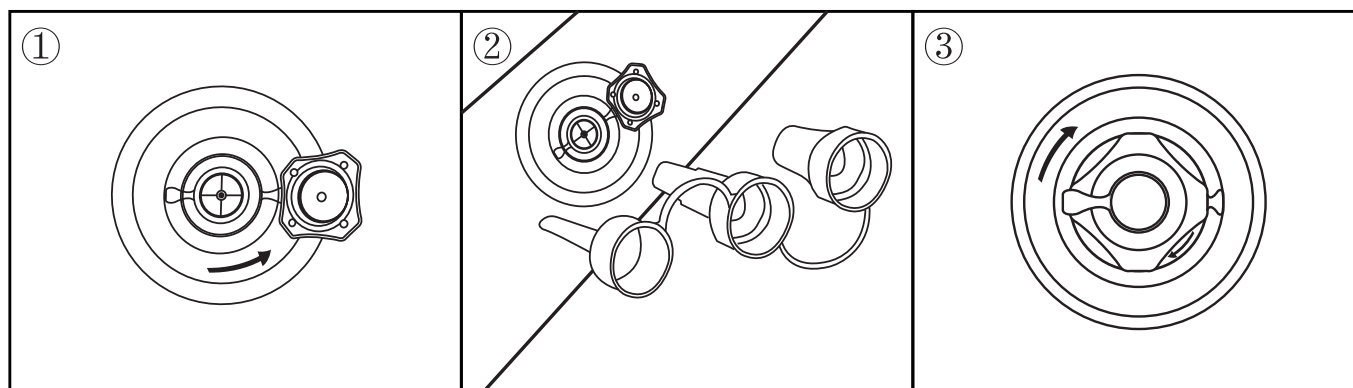


① Unscrew the cap on the Inflation Valve for inflation.

② Insert appropriate size nozzle into the inflation port on the pump. Then, insert the nozzle into valve.

③ After the air bed is fully inflated, remove the nozzle and tighten the valve cap.

Deflation Operation

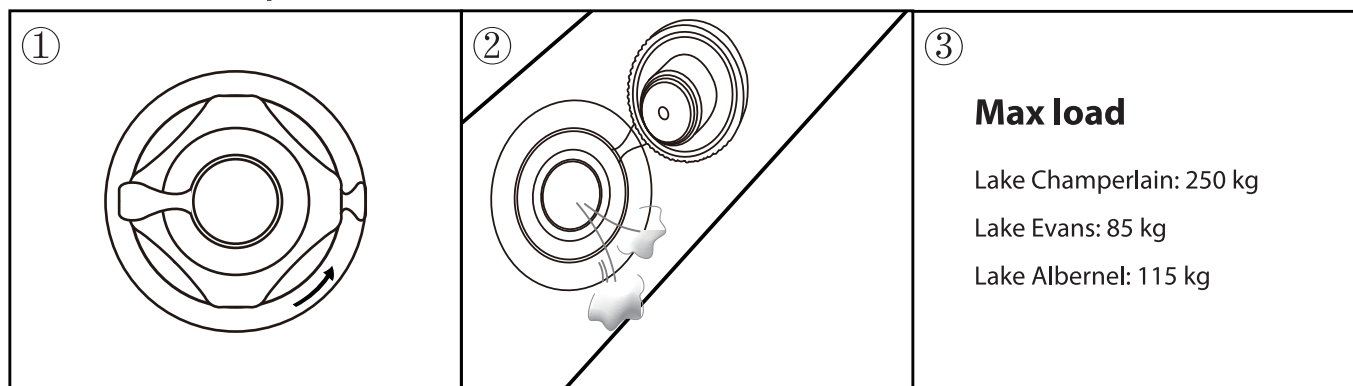

① Unscrew the second cap on the Deflation Valve for deflation.

② After the air bed is fully deflated, remove the nozzle and tighten the valve cap.

Max load

Lake Chamberlain: 250 kg

Lake Evans: 85 kg

Lake Albernel: 115 kg